 


# iHome Phone – Quick Start Guide

For a full explanation of all features and instructions, please refer to the User's Guide.


## 1 Setting up your iHome Phone

### A. Attach the stand to DECT base station

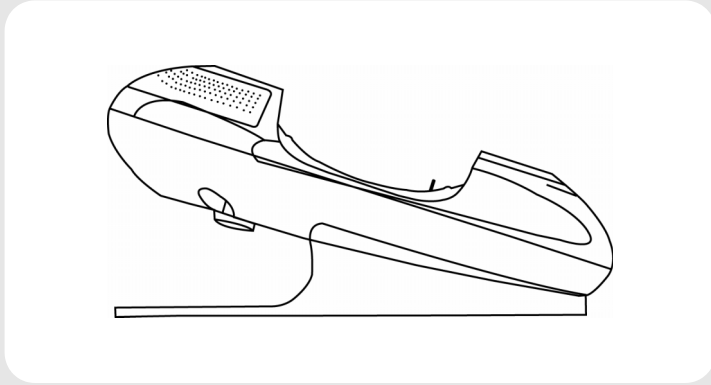

1. Insert the stand into the locking grooves at the bottom of the DECT base station.
2. Twist the stand slightly until the stand is firmly secured to the DECT base station.

### B. Connect the power cable and telephone line cord

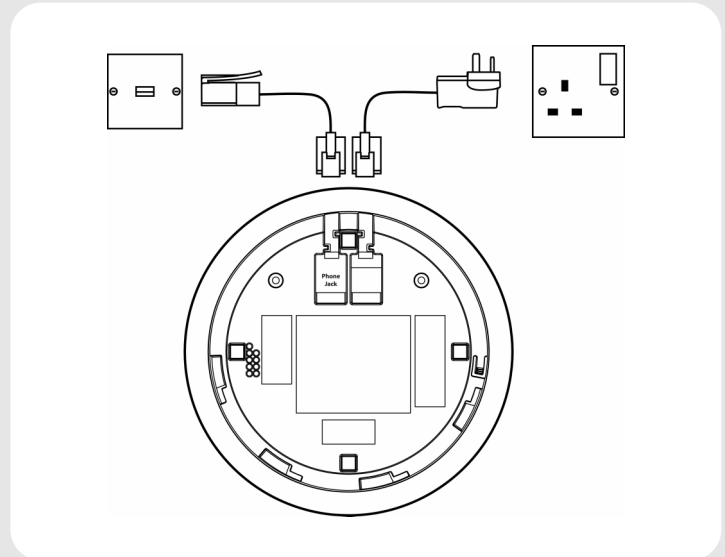


1. Plug one end of the power cable and telephone line cord to the power jack and phone jack respectively on the bottom of the DECT base station.
2. Plug the other end into a power and telephone wall socket.


### C. Removing back cover

---

1. Use the Stylus pen to gently press the keylock to release the spring lock.

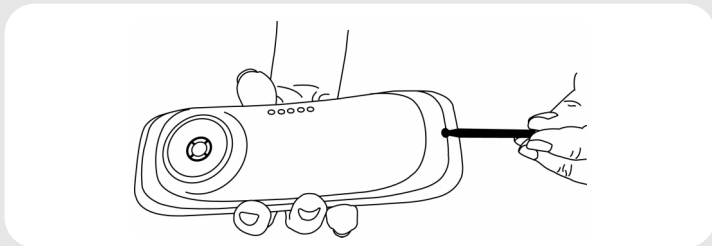

2. The back cover will disengage from the handset.

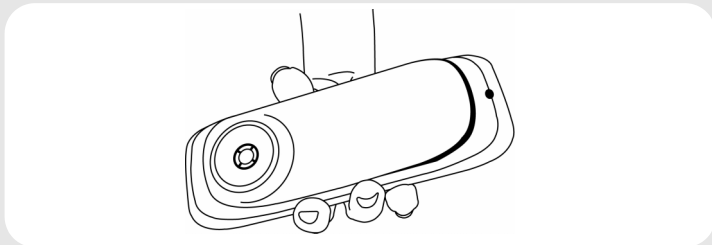

3. Remove the back cover completely.

### D. Installing the battery

---


1. Place the supplied rechargeable battery into the battery compartment of the handset.




2. Install the back cover by aligning the back cover tabs with the notches located at the top of the back panel.
3. Push down the back cover until it clicks in place.


### E. Insert and mount memory card

---

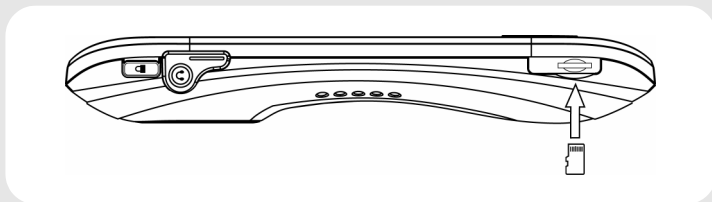

1. Insert the memory card by pushing the card firmly into the slot with the metal contacts facing up, and in the direction as indicated above.
2. Press  and tap **Settings > SD card & phone storage > Mount SD card.**


## F. Unmount and Remove memory card

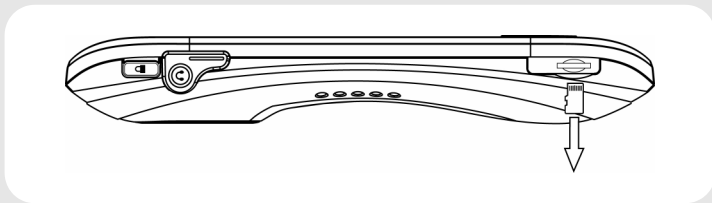

### **When the iHome Phone is off**


Push the card gently inwards to eject the memory card.

### **When the iHome Phone is on**

Press  and tap **Settings > SD card & phone storage > Unmount SD card**.

Remove the SD card by following the instructions above.


## G. Charge your iHome Phone

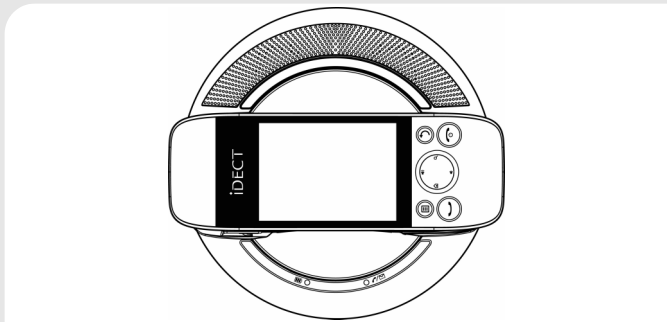


Place the handset on the DECT base station to charge for at least 6 hours.

If the Red Charging LED did not light up, you need to re-align the iHome Phone to get a good charging contact with the DECT base station.

## H. Switching on your iHome Phone

Press  for a few seconds until the Android logo is displayed on the screen. (it takes about 2 minutes for the iHome Phone to boot up)










## I. Switching off your iHome Phone

1. Press and hold  and release when the phone options menu appears.
2. Tap to select **Power Off**.
3. Tap **OK** to confirm.

## J. Setting up your iHome Phone with Welcome Wizard

When you first power up the phone, the Welcome Wizard will guide you through a basic phone configuration. Press **Next** after the **Welcome Message** to proceed and follow the onscreen instructions to set up and personalize your phone, such as language, date, time, WiFi setting, etc.



## 2 Basic operation of the iHome Phone

	Press once to access the Dialer. Press once to answer a call.
	Press once to turn on the handset. Press and hold to open the options menu that lets you turn off the phone or return to the Home screen. Press once to end a call.
	Press once to access the menu options.
	Press once to return to previous screen. Press once to hide the onscreen keyboard, a dialog box, options menu or notifications panel.
	Press  to increase return to the home screen. Press  to launch search function. Press  /  to increase or decrease volume.

### 3 Operating the touchscreen

Action	Function	Operations
<b>Tap</b>	Select onscreen items such as application and settings icons Select onscreen buttons. Type using the onscreen keyboard.	Gently tap an item on the screen to select the item that you wish to activate.
<b>Tap and hold</b>	Open the available options for an item, for example, tap and hold a contact or a link on a web page. (Think of this as using the right-click button on a mouse)	Tap an item on the screen and hold in place for 2-3 seconds.
<b>Drag</b>	Move items on the screen or shift the view on the screen.	Apply light pressure against an item on the screen then, without raising your finger, move it across the screen until you have reached the target position.
<b>Slide</b>	Quickly move vertically or horizontally across the screen.	
<b>Flick</b>	Quickly browse a list of items in a vertical direction.	Flick is similar to slide, except that flick involves swiping the screen in lighter and quicker strokes.

### 4 Making a Wireless Connection

1. From the homescreen, press .
2. Tap **Settings > Wireless & networks**.  
*If ✓ did not appear next to the Wi-Fi option, tap this option to turn on Wi-Fi connection.*
3. Tap **Wi-Fi settings > Network notification**, and make sure that ✓ appears next to the option.  
*The screen displays a list of available Wi-Fi networks.*
4. Tap the Wi-Fi network that you want the iHome Phone to be connected to.  
*If the network is not secured with a password, your iHome Phone will start to establish a link with it.*  
*If is a secured network, you will be prompted to enter the wireless password.*
5. Tap on the password edit box to launch the onscreen keyboard. Enter the password and tap **Done**.
6. Select **Open** or **Shared** and **WEP key index (1 - 4)**.
7. Tap **Connect**.  
*Your iHome Phone will start to establish a link to the network.*  
*Once it is established,  will appear on the status bar of your home screen.*

#### Note

If you encounter problems connecting to the Wi-Fi network using preconfigured settings, try to tap on the network and select **Forget** to forget the "Remembered" network, then perform setup again.

### 5 General Information

#### If you need help.....

The Binatone Help Line is available from 9.00am ~ 5.00 pm, Mondays to Fridays, please call:

**0845 345 9677** for UK